
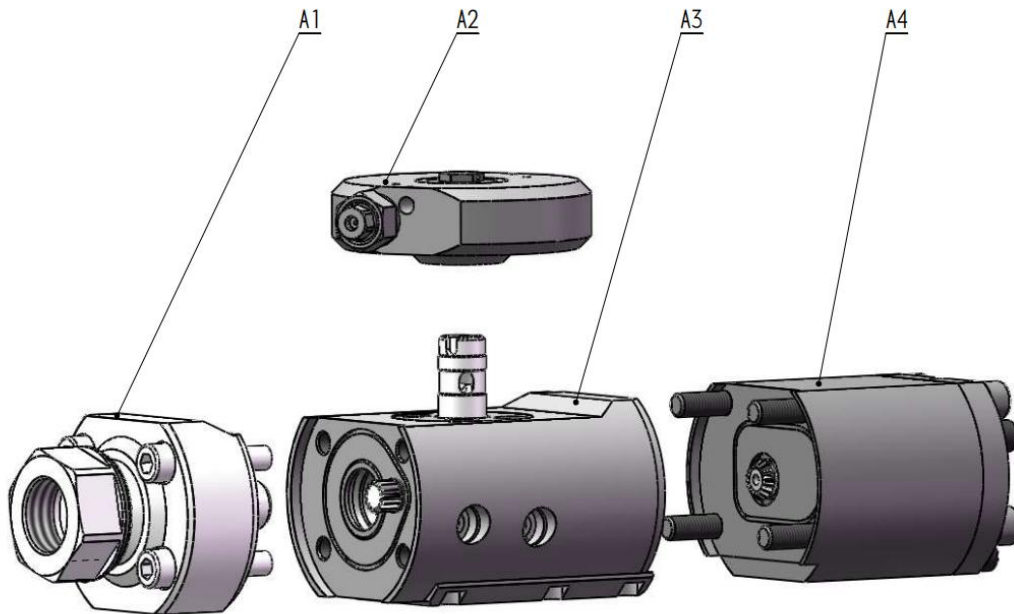



**Three-dimensional Nozzle – Exploded View and Parts Reference Table**

No.	Part No.	Name	QTY for One Set
A1	B03-002703	Top Cover Assembly	1
A2	B03-002708	Nozzle Holder Assembly	1
A3	B03-002704	Gearbox Assembly	1
A4	B03-002706	Magnetic Damping Assembly	1

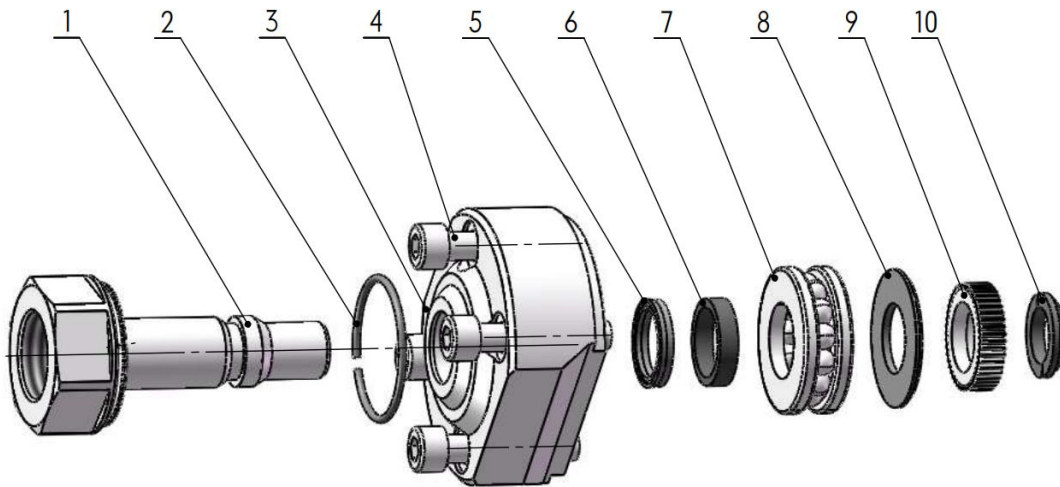


A1 Top Cover Assembly – Exploded View and Parts Reference Table

No.	Part No.	Name	QTY for One Set
1	B03-002702	Water Inlet Shaft	1
2	E00-006640	Wire Snap Ring for shaft	1
3	C03-002701	Top Cover	1
4	E00-006641	Hex Socket Head Cap Screw M10×50	4
5	E02-005583	Spring Seal	1
6	C03-002703	Copper Washer	1
7	F03-002041	Thrust Bearing	1
8	C03-002704	Washer	1
9	C03-002705	Water Inlet Gear	1
10	C03-002706	Half Ring	1

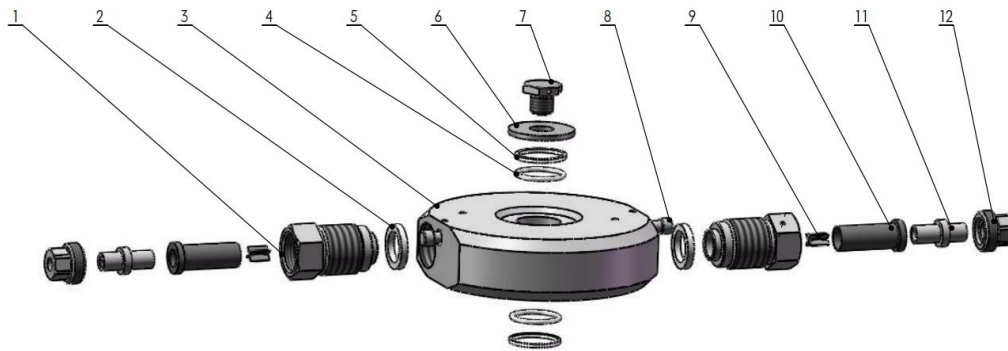

A2 Nozzle Holder Assembly – Exploded View and Parts Reference Table


No.	Part No.	Name	QTY for One Set
1	C03-002746	Nozzle Base	2
2	C03-002747	Seal Ring	2
3	C03-002739	Nozzle Holder	1
4	E02-005595	O-Ring 23×1.9	2
5	C03-002741	Reinforcing Washer	2
6	E00-006666	Large Washer	2
7	E00-006668	Hex Socket Plug	1
8	C03-002740	Locating Pin	2
9	C03-002745	Cross Piece	2
10	C03-002744	Flow Guide Tube	2
11	C03-002743	Nozzle	2
12	C03-002742	Nozzle Compression Cover	2

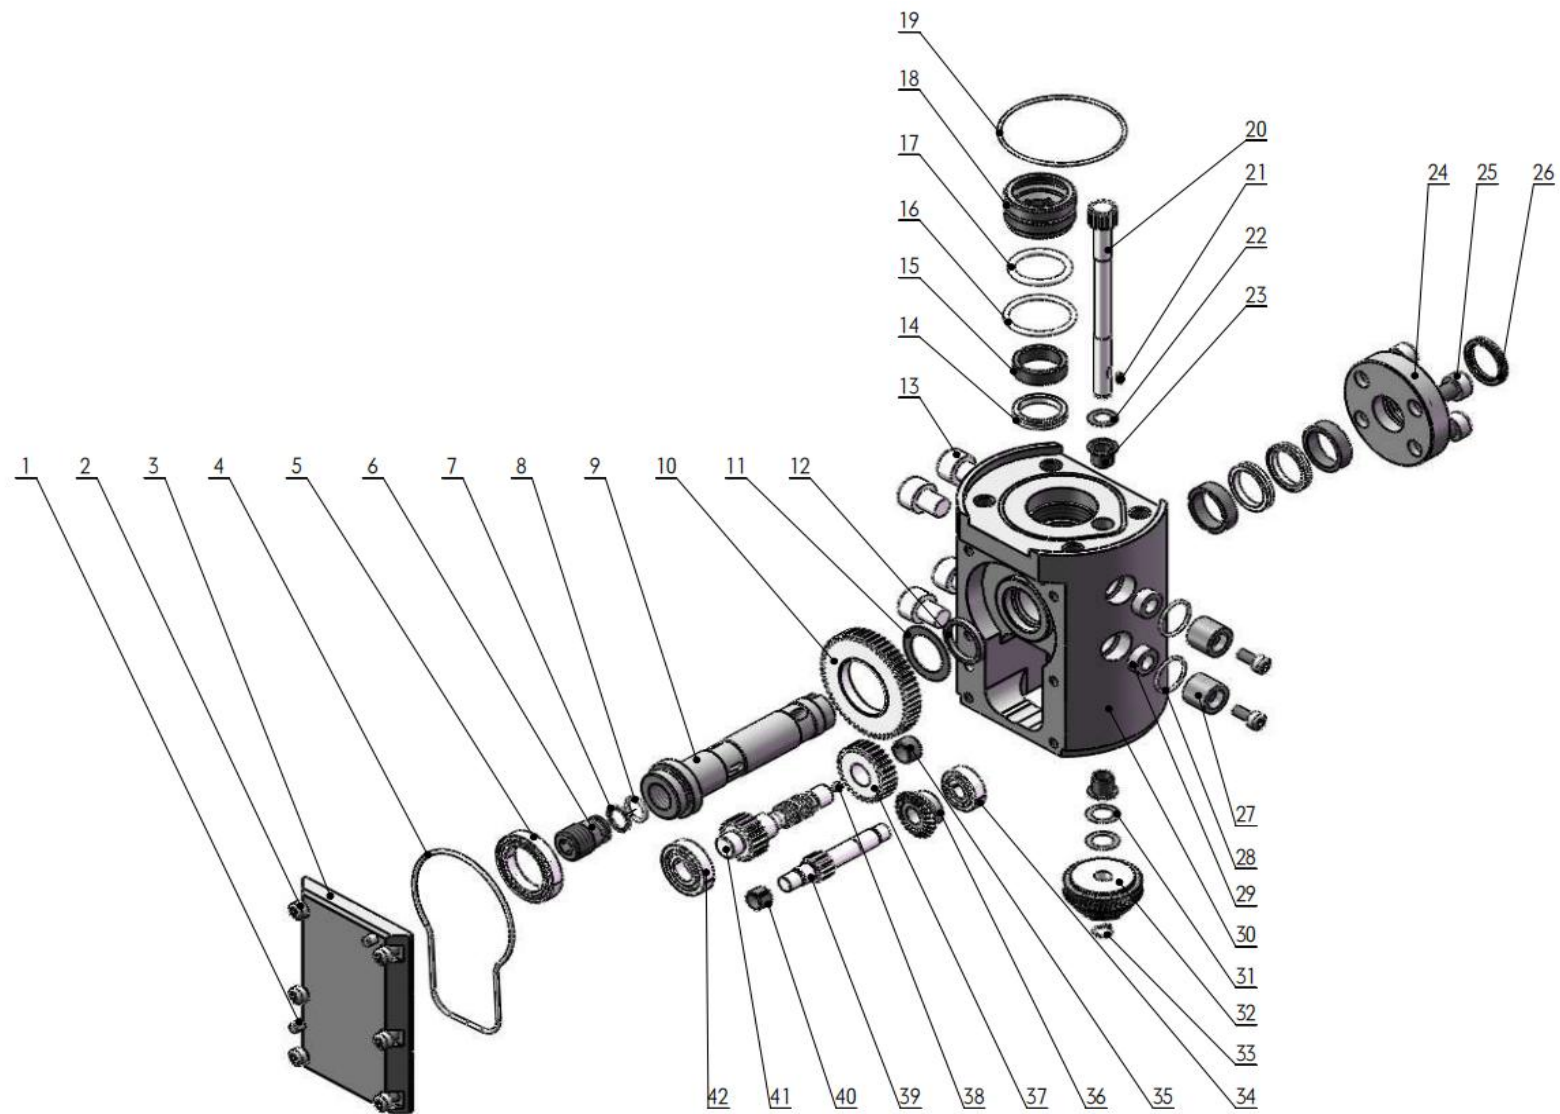



A3 Gearbox Assembly – Exploded View and Parts Reference Table

No.	Part No.	Name	QTY for One Set
1	E00-006644	Cylindrical Pin	2
2	E02-000329	Hex Socket Head Cap Screw M5×12	8
3	C03-002720	Side Cover	1
4	E02-005589	O-Ring 90×1.9	1
5	F03-002043	Deep Groove Ball Bearing	1
6	C03-002748	Plug	1
7	C03-002749	Reinforcing Washer	1
8	E02-000006	Ring 14×1.9	1
9	C03-002708	Water Outlet Shaft	1
10	C03-002709	Large Gear	1
11	C03-002713	Copper Washer	1
12	E02-005603	Seal Ring	1
13	E00-006654	Hex Socket Set Screw M10×12	4
14	C03-002715	Seal	3
15	C03-002714	Copper Washer	3
16	E02-005587	34×2.4O-Ring 34×2.4	1
17	E02-000019	O-Ring 30×3.1	1
18	C03-002717	Lock Nut	1
19	E02-005591	O-Ring 60×1.5	1
20	C03-002719	Long Gear Shaft	1
21	E00-006656	Flat Key	1
22	C03-002718	Copper Washer	1
23	E02-005588	Flanged Composite Copper Bushing	2
24	C03-002716	Compression Cover	1
25	E02-000352	Hex Socket Head Cap Screw M8×12	4
26	E02-005586	Spring Seal	1
27	C03-002721	Vent Cap	2
28	E02-005597	O-Ring 20×1.5	2
29	E02-005590	U-Type Seal	2
30	C03-002707	Shell	1
31	E00-006642	Adjustment Washer	10
32	B03-002705	Torque Limiter	1
33	E00-006643	Elastic Snap Ring for Shaft	1
34	F03-002042	Deep Groove Ball Bearing	1
35	E02-005584	Composite Copper Bushing	1
36	C03-002711	Large Bevel Gear	1
37	C03-002759	Cylindrical Gear	1
38	E02-000589	Steel Ball	1
39	C03-002710	Small Gear Shaft	1
40	E02-005443	SF-1 Composite Copper Bushing	1
41	C03-002712	Worm Gear Shaft	1
42	F03-002044	Deep Groove Ball Bearing	1

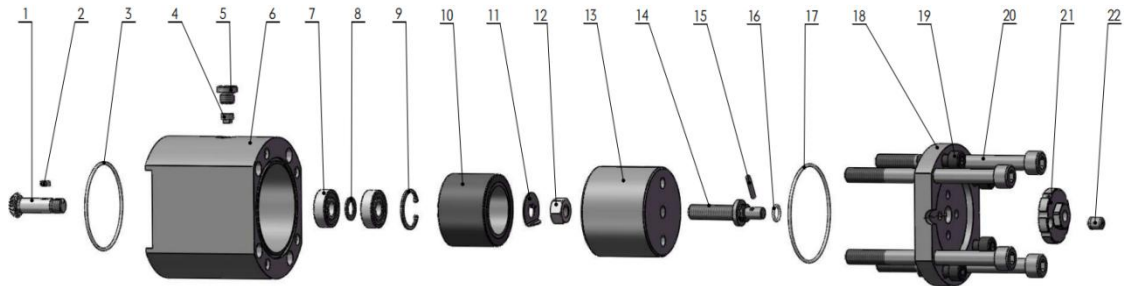**A4 Magnetic Damping Assembly – Exploded View and Parts Reference Table**

No.	Part No.	Name	QTY for One Set
1	C03-002729	Small Bevel Gear	1
2	E00-006661	Flat Key	1
3	E02-005594	O-Ring 58×1.8	1
4	C03-002728	Damping Ring Locating Pin	1
5	E00-006658	Hex Socket ED Plug	1
6	C03-002727	Magnetic Shell	1
7	F03-002045	Deep Groove Ball Bearing	2
8	C03-002730	Washer	1
9	E00-006660	Internal Snap Ring	1
10	B03-002707	Magnetic Ring Assembly	1
11	E00-006674	Round Nut Lock Washer	1
12	E00-005345	Hex Nut	1
13	C03-002731	Magnetic Damping Ring	1
14	C03-002732	Magnetic Adjustment Screw	1
15	E00-006663	Spring-Type Cylindrical Pin	1
16	E02-005592	O-Ring 12×1.8	1
17	E02-005593	O-Ring 65×1.8	1
18	C03-002733	Magnetic Cover	1
19	E00-005286	Hex Socket Head Cap Screw M8×25	4
20	E00-006664	Hex Socket Head Cap Screw M10×105	4
21	C03-002734	Magnetic Adjustment Nut	1
22	E00-006669	Stepped Locating Ball	1